



LOADING GUIDE SIDE CURTAINS

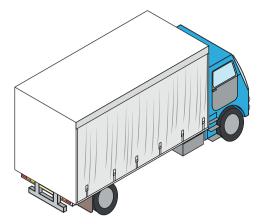

Curtains are flexible sheets of material, usually made of durable vinyl, fitted to the sides of a truck or trailer. Unless rated for load restraint purposes, they are designed to:

- Protect the load from the elements
- Allow for easier access to the load
- Make loading and unloading safer
- Provide security for the load
- Reduce the overall weight of the trailer.




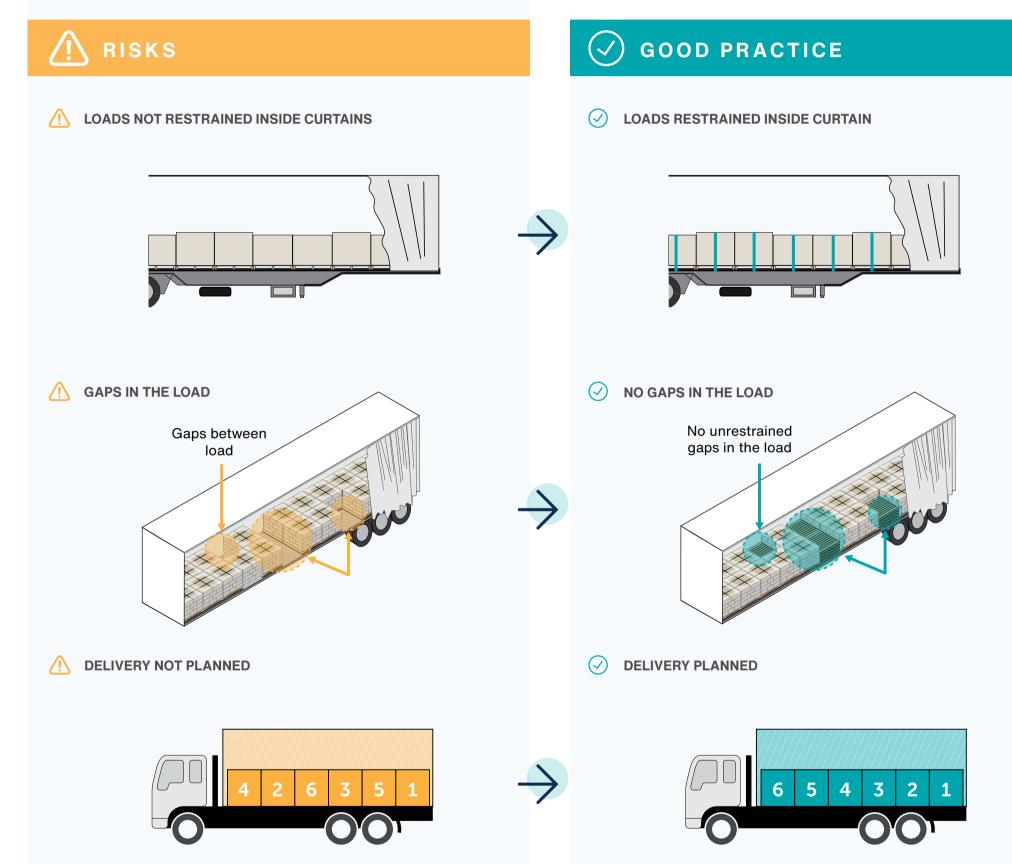

▲ NOT RESTRAINED AFTER DROPS

Gap Gap Gap

RESTRAINED AFTER DROPS

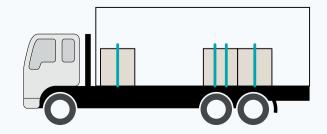

© Copyright National Heavy Vehicle Regulator 2023, creativecommons.org/licenses/by-sa/3.0/au

Note: This information is intended to provide general guidance only and does not constitute legal advice.